


## ◆ NOTE

- Make sure electric off before installing the fixture.
- The circuit connection must be correct before connecting the wire.
- Don't worry about the heat of the surface of the lamp when it's working. It's normal situation.
- The lifespan will be shorter and the light attenuation will be faster if the lamp works on for 24 hours every day.
- Make sure output voltage within the range of rated voltage before installing the lamp.
- Regularly clean the dust on the lamp to maintain good heat dissipation performance.
- If the lamp doesn't work, don't inspect it when power is on. The lamp should be inspected and maintained by professional electrician..


## LUMO LED High Bay Light

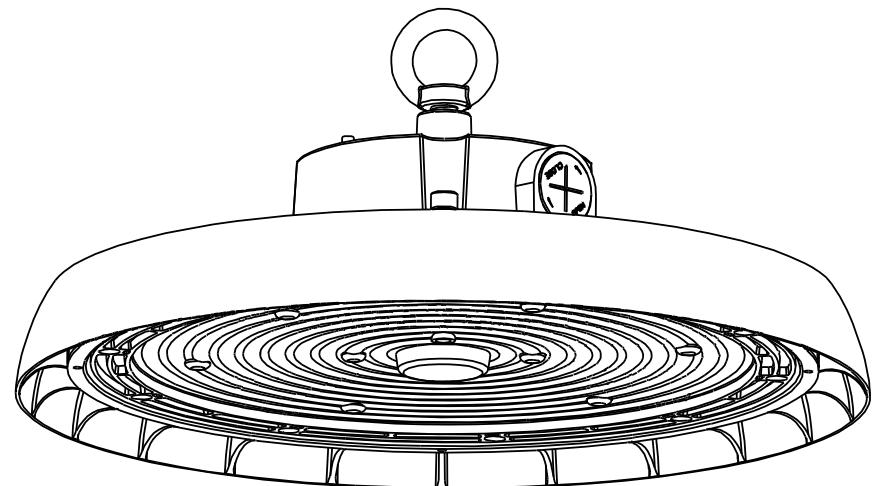

ARES-A-100W/240W (IP65) Instruction Manual


LUMO LED High Bay light is suitable for industrial zone, big-box store, square, station, wharf, bridge, warehouse, etc.

## ❖ Diagram

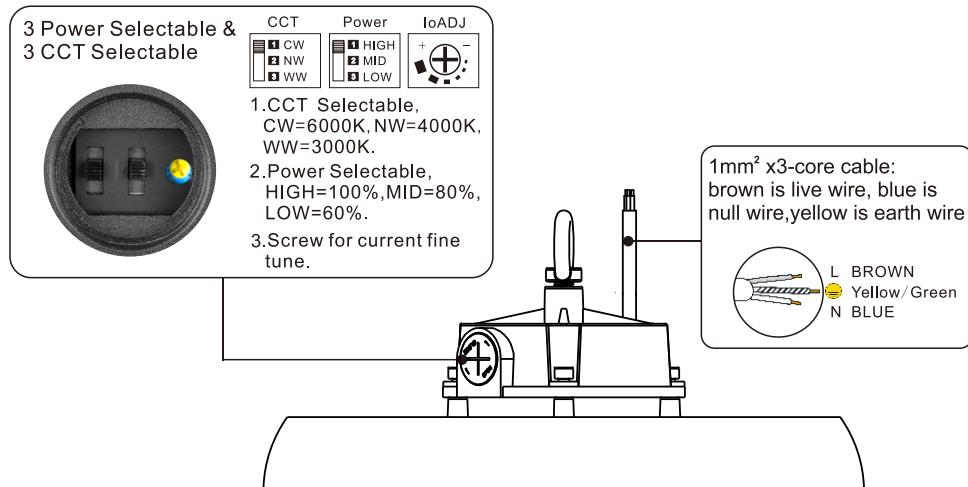

## ❖ Tools Recommended

- Hammer drill
- Cross screwdriver
- Shifting spanner
- Insulation tape

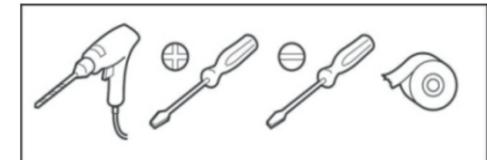

## ❖ Installation instructions

- 1.Operating voltage :AC100-277V, 50/60Hz, it may be dangerous outside this voltage range.
- 2.It's an indoor light. Waterproof and dust-proof, protection class Ip65.  
Do not install in a closed or poor air circulation environment.
- 3.Before installation, ensure that the wire is connected correctly, and measures must be taken at the junction to prevent leakage to avoid accidents.
- 4.Measures must be taken at the seams to electric shoc.
- 5.Do not disassemble without factory permission, otherwise the performance and function will be seriously affected.

## ❖ Installation Diagram

